Jumbo Mount Master Utility Block

Installation Instructions U.L. Listed

Part No. Offset: PAFMHULOxxx
Centered: PAFMHULCxxx
PAFMJULCxxx

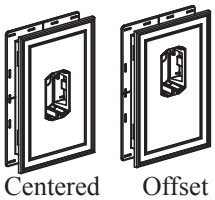

Centered Offset

To be installed prior to siding
-Maximum 20 lb. light fixture

Step 1

Remove the trim ring from the Block Assembly. See Figure 1 below..

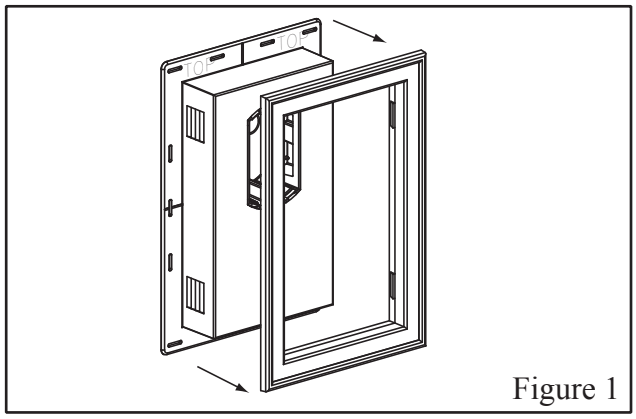

Figure 1

Step 2

Determine where wires will come through wall and remove the corresponding knockout in the black electrical box. Score the perimeter of the round knock-outs from the inside of the box with a utility knife. Knock out from the back of the box using a screw driver as a chisel. Align the hole with the wires.

Step 3

Place the Block over the desired application with the words "TOP" in the correct orientation. Be sure to place tape or sealant between the Block and the house. Attach the Block using an 8d nail or equivalent with a minimum of ten attachments (eight attachments around the outside of the part and two attachments on the inside of the electrical box). See Figure 2 below for proper fastener locations.

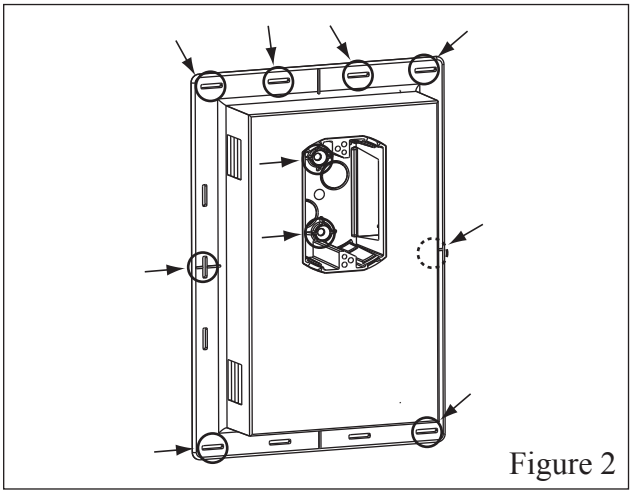

Figure 2

Step 4

Cut the siding around the Block. Install the siding according to the manufacturer's installation instructions. See Figure 3 below.

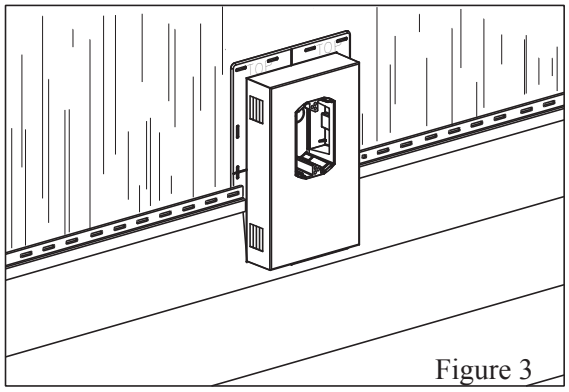

Figure 3

Step 5

Install the trim ring by locking it into place. See Figures 4A and 4B below.

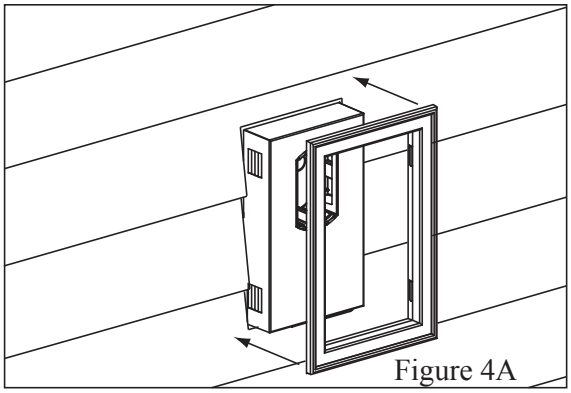

Figure 4A

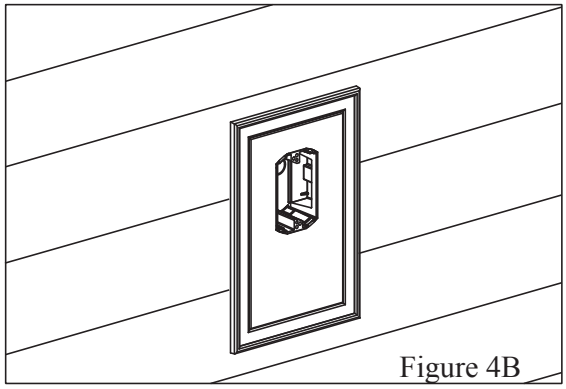

Figure 4B

Step 6

Mount the fixture to the Mount Master Utility Block. Be sure that all electrical product gaskets have the proper sealant.